



- X Overcast
- ⊗ Overcast & Crossover
- TP Coal Transfer Point
- Direction of Air Coursing
- R - Regulator
- d - Door
- I - Stopping

101
135
64

Return
Intake & Supply
Drainage
Main B Belt
Belt Tail
Coal 3-8 DDH TA
DDH.C. Coal