



BASE LINE 0+00 SOUTH

SPOIL

SPOIL

SOUTH LIMIT OF LEASE TO ST. CLAIR COAL CO.

112+00.0 SOUTH  
114+00.0  
116+00.0  
118+00.0  
120+00.0  
122+00.0  
124+00.0  
126+00.0  
128+00.0  
130+00.0  
132+00.0  
134+00.0  
136+00.0  
138+00.0  
140+00.0  
142+00.0  
144+00.0  
146+00.0  
148+00.0  
150+00.0  
152+00.0  
154+00.0  
156+00.0  
158+00.0  
160+00.0  
162+00.0  
164+00.0  
166+00.0  
168+00.0  
170+00.0 SOUTH

ST. CLAIR COAL CO.  
TOWN AND RANGE