


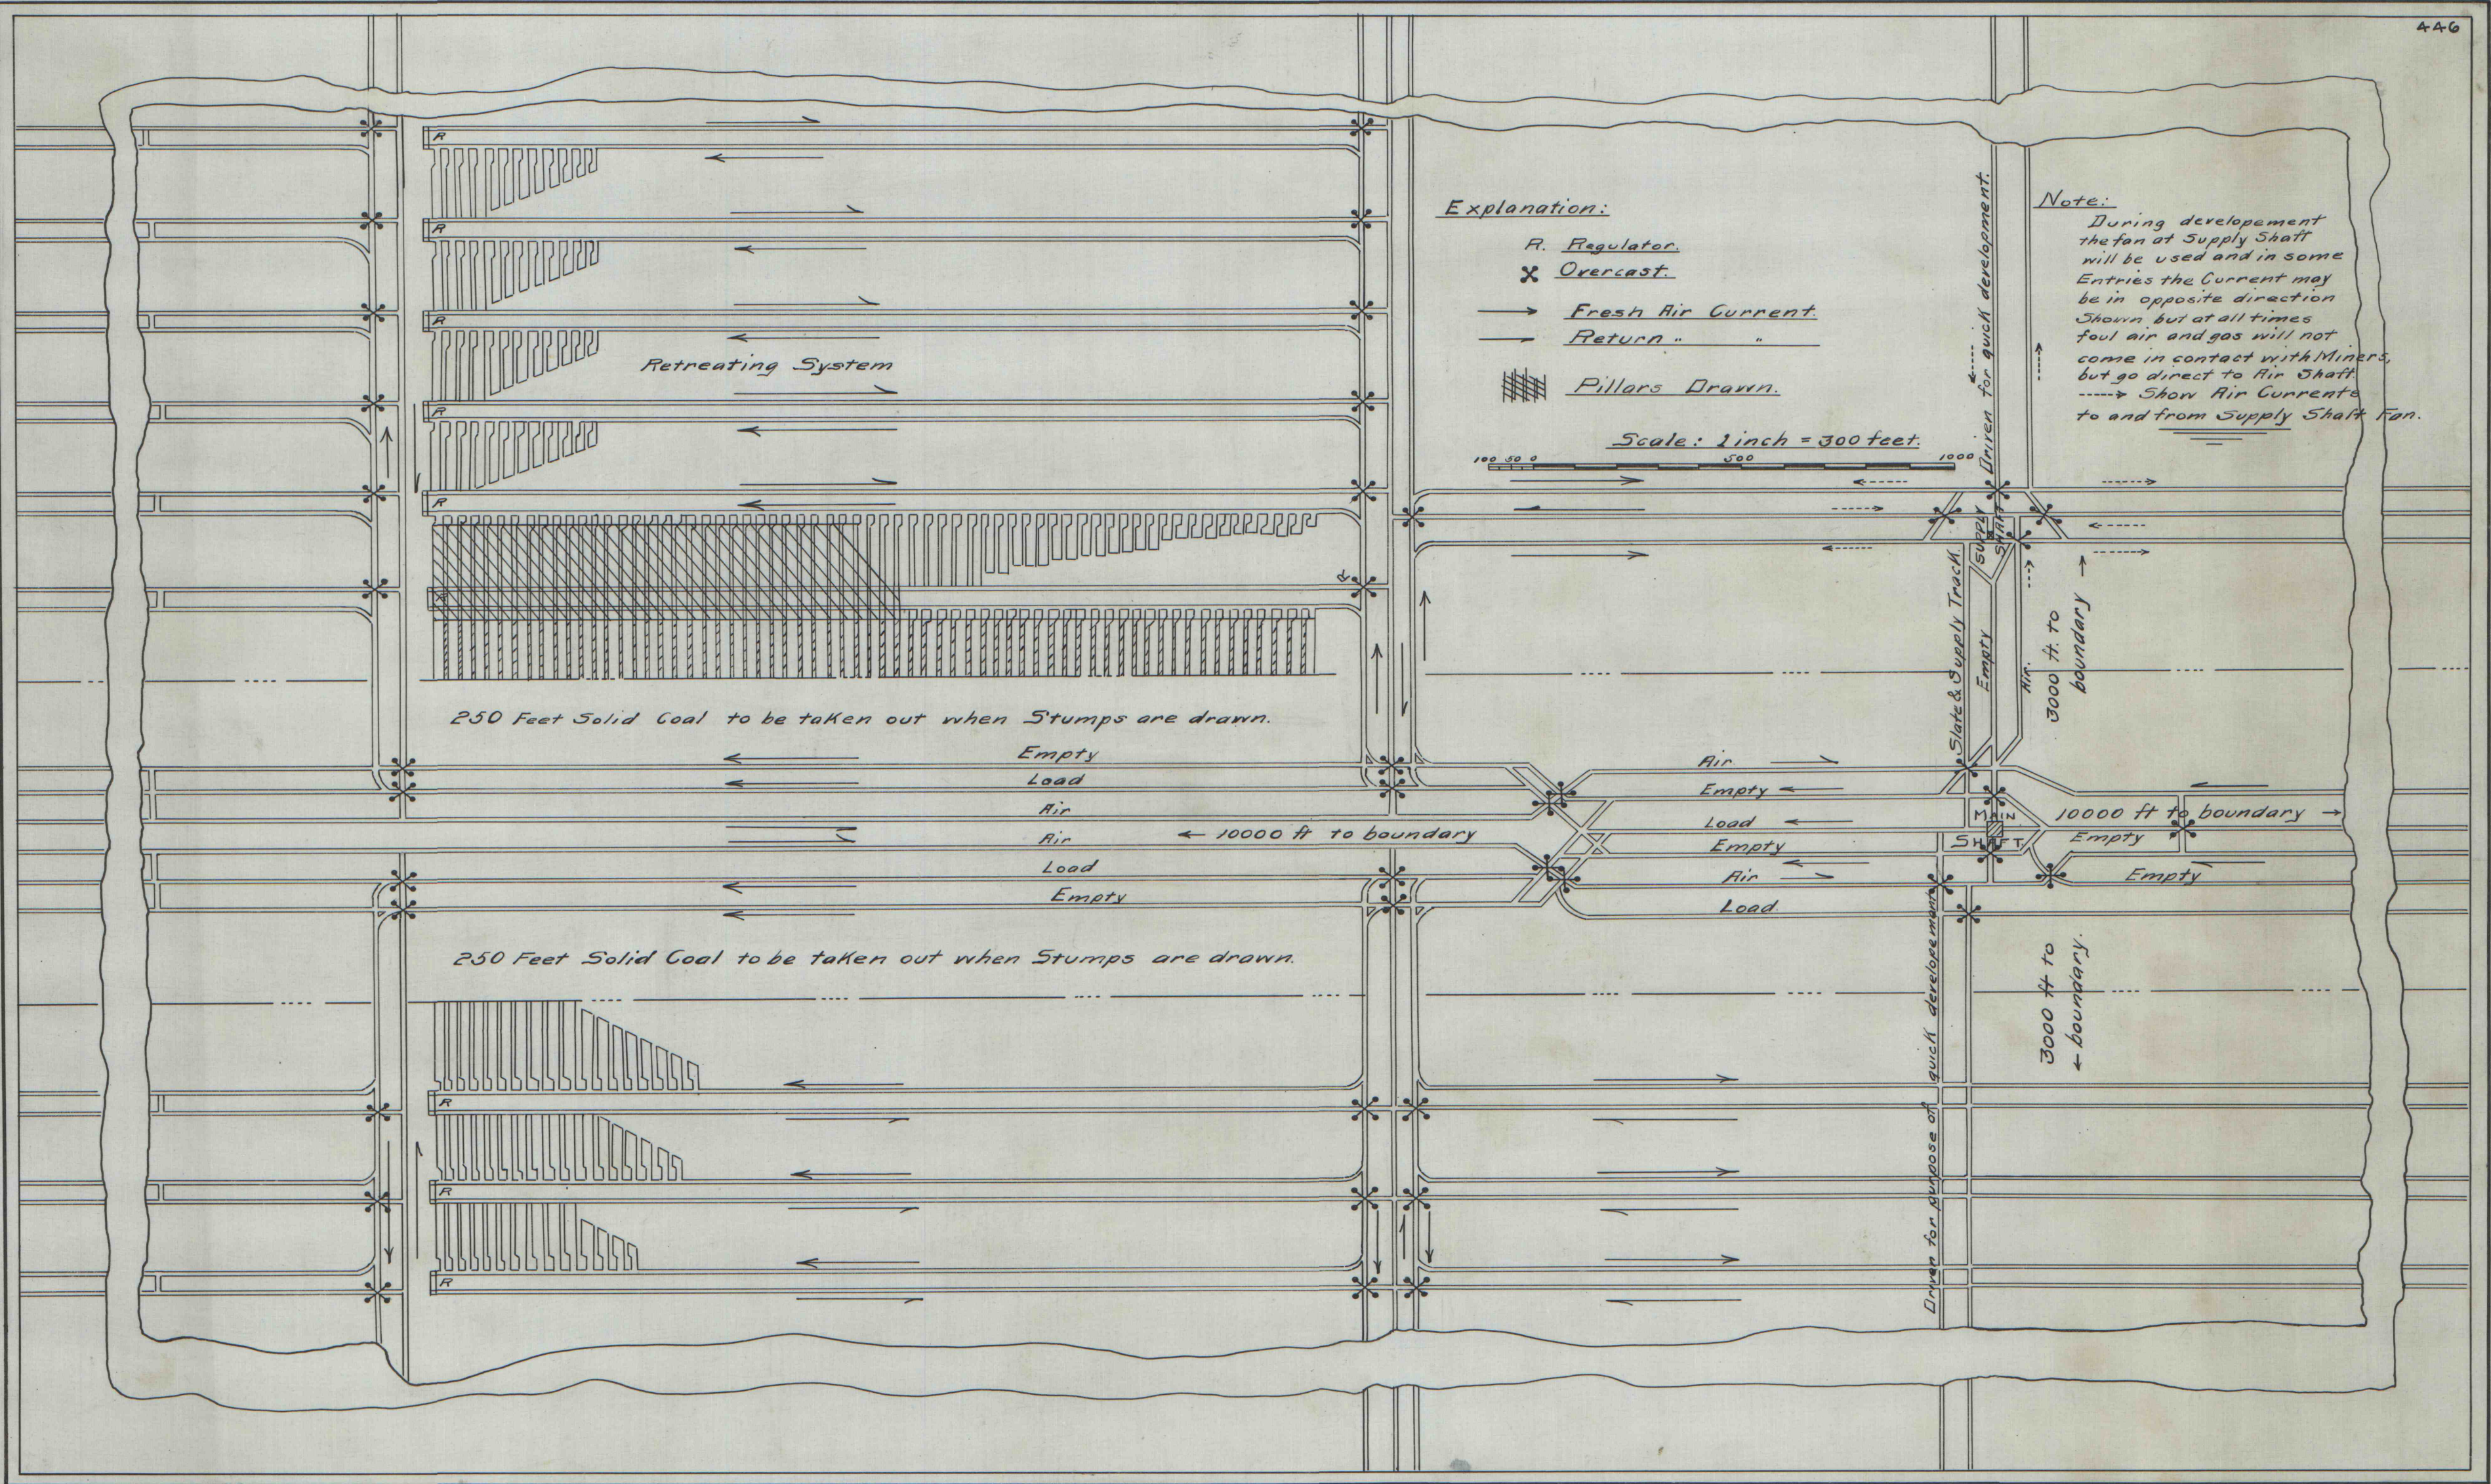

Explanation:

- R. Regulator.
- X Overcast.
- Fresh Air Current
- - - Return " "
- /// Pillars Drawn.

Scale: 1 inch = 300 feet.

Note:

During development the fan at Supply Shaft will be used and in some Entries the Current may be in opposite direction Shown, but at all times foul air and gas will not come in contact with Miners, but go direct to Air Shaft. - - - - - Show Air Currents to and from Supply Shaft Fan.