
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 0+00
STATION 0+00
LOOKING EAST


SCALE
CROSS SECTION 1+00
STATION 1+00
LOOKING EAST

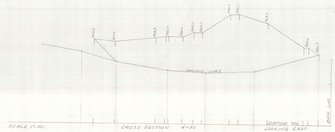
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 2+00
STATION 2+00
LOOKING EAST

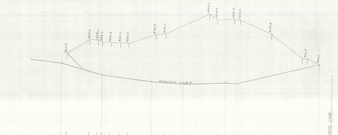
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 3+00
STATION 3+00
LOOKING EAST

EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 4+00
STATION 4+00
LOOKING EAST


EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 1+00
STATION 1+00
LOOKING EAST


SCALE 1"=50'
CROSS SECTION 3+00
STATION 3+00
LOOKING EAST

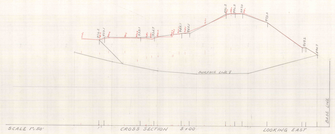
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 4+00
STATION 4+00
LOOKING EAST

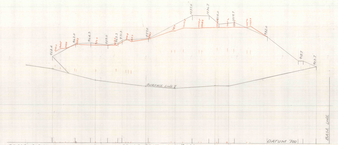
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 5+00
STATION 5+00
LOOKING EAST

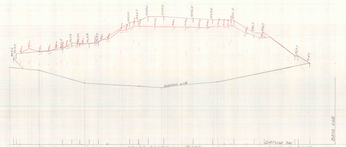
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 6+00
STATION 6+00
LOOKING EAST


EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 1+00
STATION 1+00
LOOKING EAST


SCALE 1"=50'
CROSS SECTION 3+00
STATION 3+00
LOOKING EAST

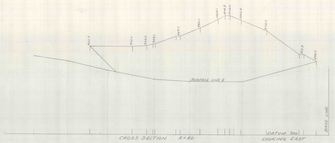
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 4+00
STATION 4+00
LOOKING EAST

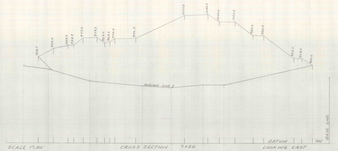
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 5+00
STATION 5+00
LOOKING EAST

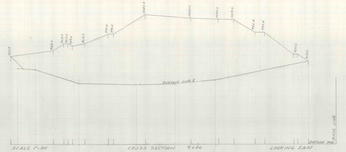
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 6+00
STATION 6+00
LOOKING EAST


EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 2+00
STATION 2+00
LOOKING EAST


SCALE 1"=50'
CROSS SECTION 4+00
STATION 4+00
LOOKING EAST

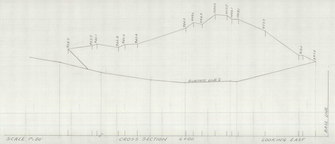
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 5+00
STATION 5+00
LOOKING EAST

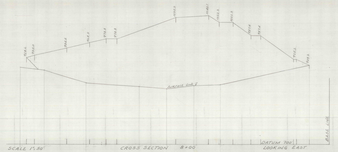
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 6+00
STATION 6+00
LOOKING EAST

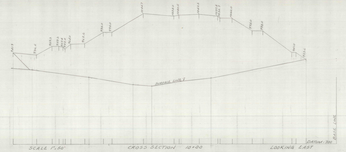
EXISTING SURFACE
SCALE 1"=50'
CROSS SECTION 7+00
STATION 7+00
LOOKING EAST

36" PAPER