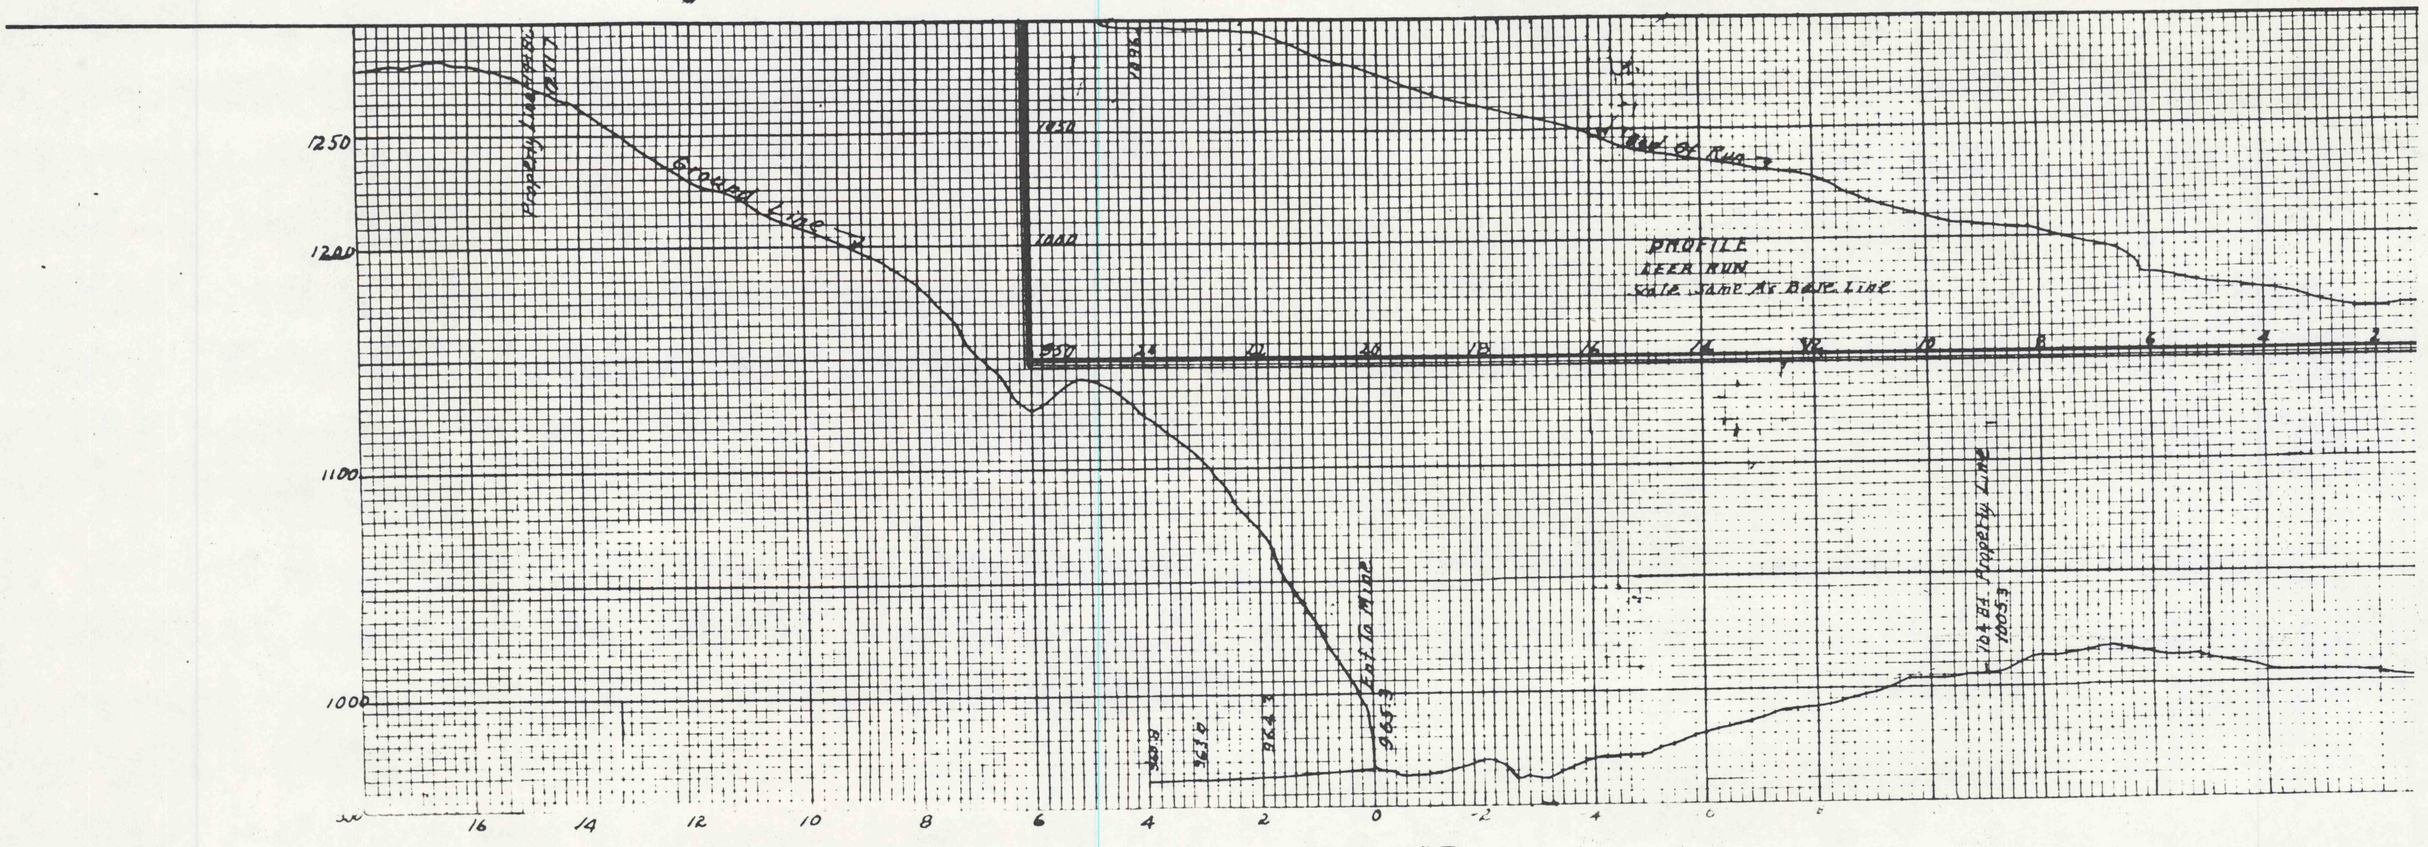
Ground Line
Crown Line
Base Line
Coal Line
Fault
Fault
1250
1200
1100
1000
1050
1000
950
16
14
12
10
8
6
4
2
0
-2
4
6
8
PROFILE
DEER RUN
Scale same as Base Line
End of Run 2
End of Run 1
Entry Mine
Entry Mine
Entry Mine