DATUM 786
BASE LINE
SCALE 1" = 50'
CROSS SECTION 15+50
LOOKING EAST

DATUM 786
BASE LINE
SCALE 1" = 50'
CROSS SECTION 16+50
LOOKING EAST

DATUM 786
BASE LINE
SCALE 1" = 50'
CROSS SECTION 17+50
LOOKING EAST

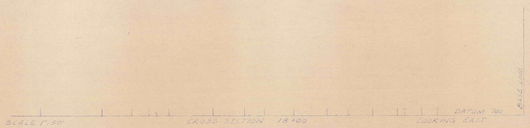
DATUM 786
BASE LINE
SCALE 1" = 50'
CROSS SECTION 18+50
LOOKING EAST

DATUM 786
BASE LINE
SCALE 1" = 50'
CROSS SECTION 19+50
LOOKING EAST

DATUM 786
BASE LINE
SCALE 1" = 50'
CROSS SECTION 17+50
LOOKING EAST

DATUM 786
BASE LINE
SCALE 1" = 50'
CROSS SECTION 17+50
LOOKING EAST



DATUM 786
BASE LINE
SCALE 1" = 50'
CROSS SECTION 20+50
LOOKING EAST

DATUM 786
SCALE 1" = 50'
CROSS SECTION 20+50
LOOKING EAST