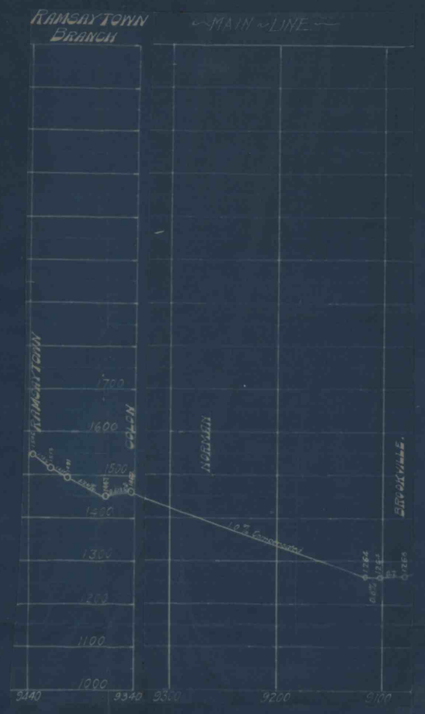
RAMSAYTOWN BRANCH
MAIN LINE
RAMSAYTOWN
NORMAN
BROOKVILLE
1700
1600
1500
1400
1300
1200
1100
1000
9340
9300
9200
9100
Scale Profile
1" Ver = 200'
1" Hor = 8000'

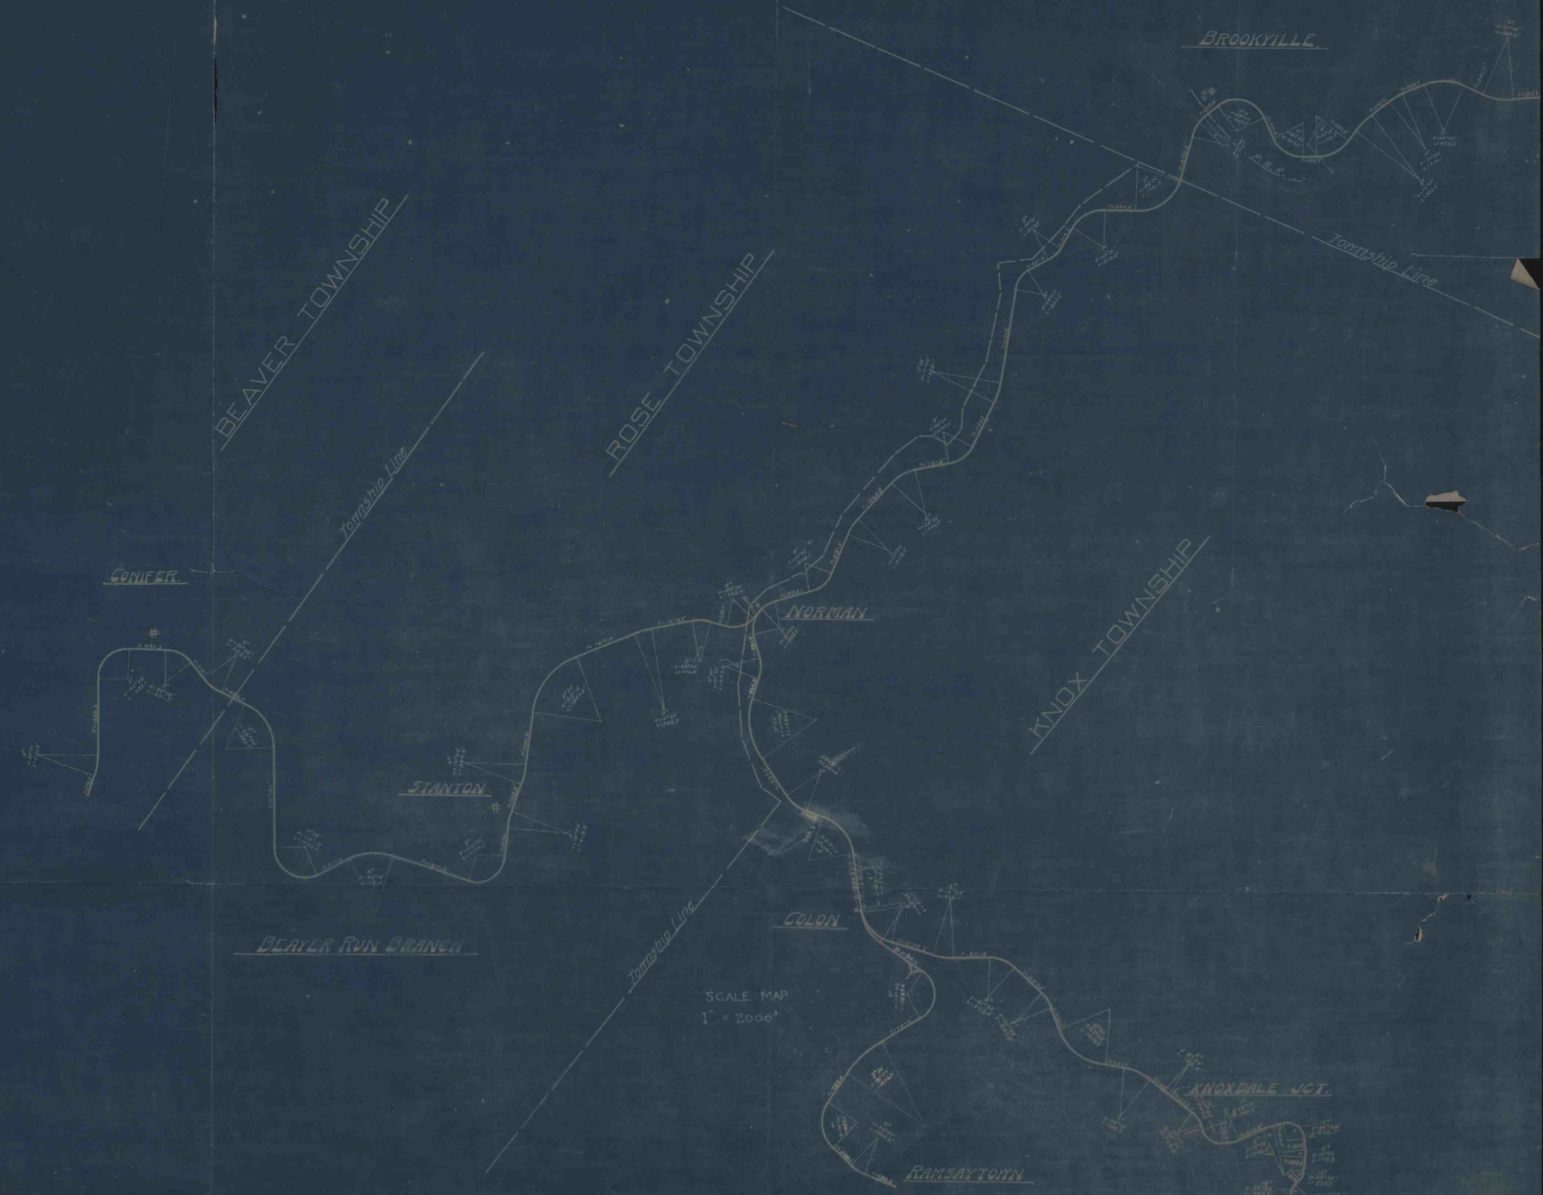
BROOKVILLE
Township Line
BEAVER TOWNSHIP
ROSE TOWNSHIP
KNOX TOWNSHIP
CONIFER
NORMAN
STANTON
COLON
BEAVER RUN BRANCH
KNOXDALE JCT.
RAMSAYTOWN
Scale Map
1" = 2000'

IMAPS 15653