


FITTING LINE 2 TO PETT. 3 & A TOP SKIDMORE TRACING.

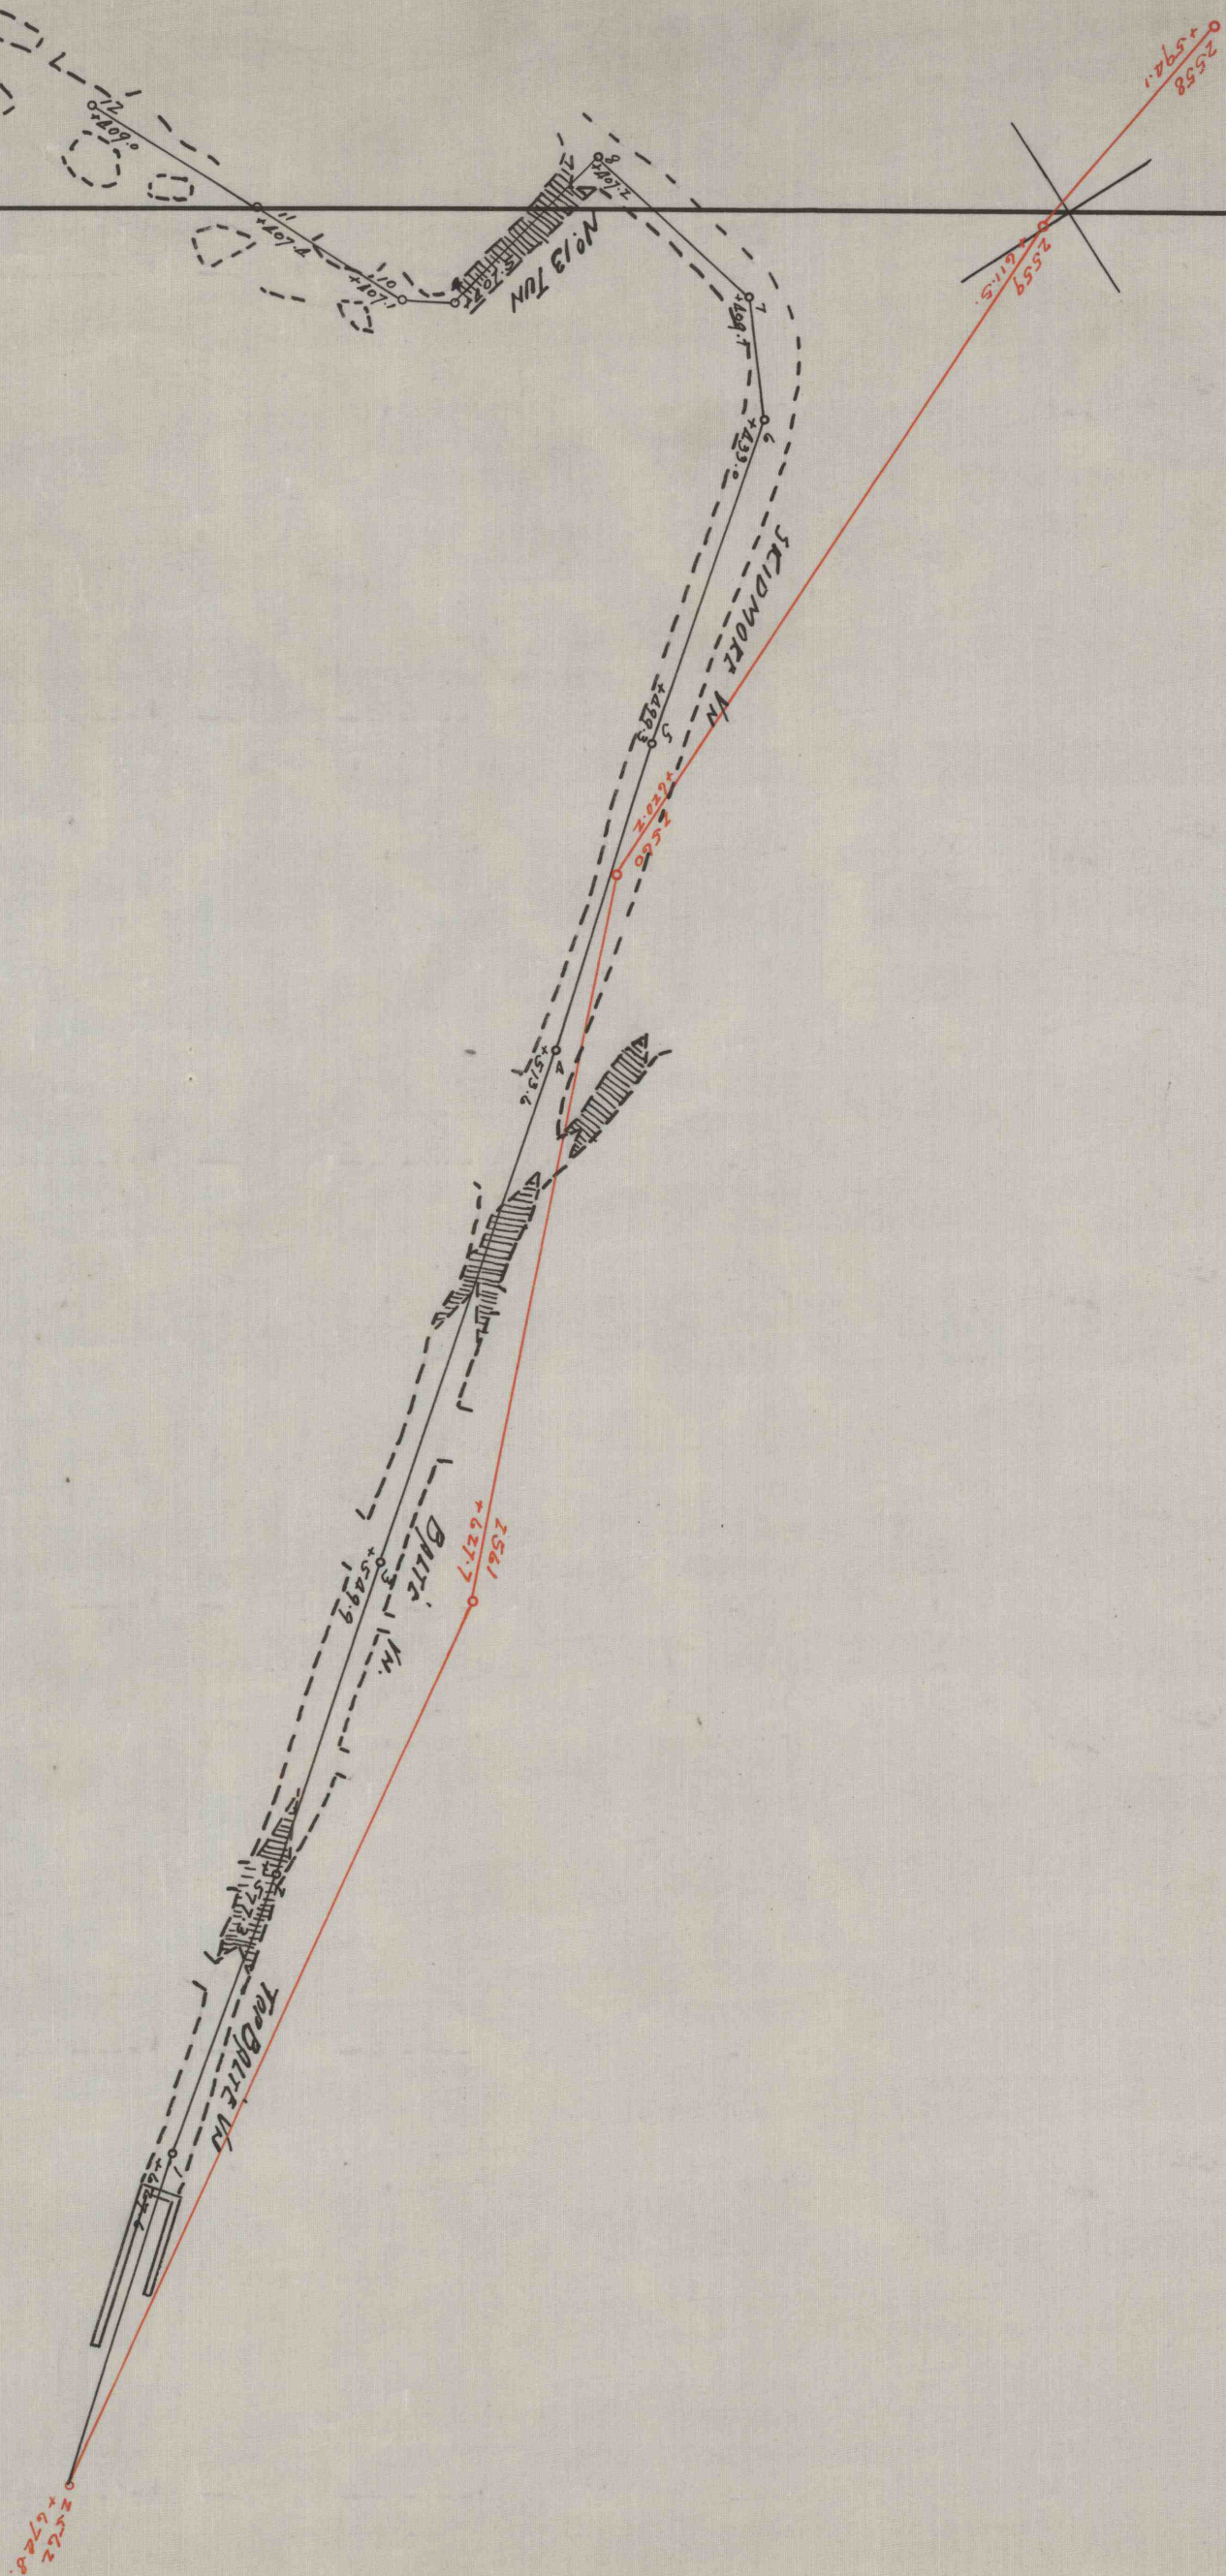

SUPPLEMENT TO PETTIBONE NO. 3 & 4
TOP SKIDMORE VEIN TRACING
SHOWING MINERAL SPRINGS (OLIVINE)
SLOPE TO CHECKER VEIN.
SCALE 1" = 100'