BOTTOM
TRANSFER HOLE #2 PORTAL
PLAN FOR ANCHORAGE
OF PLOW CHAIN AXLE
TO ROOF
SCALE: 12" = 1 FOOT

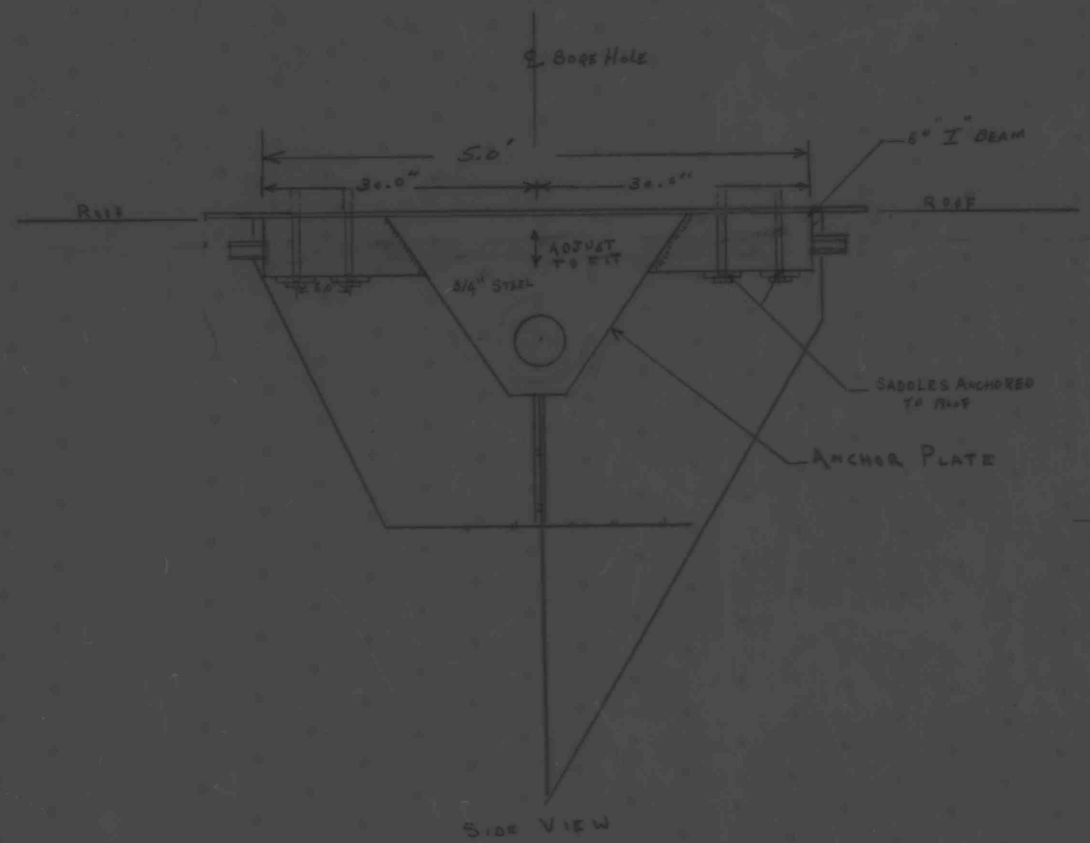

SIDE VIEW

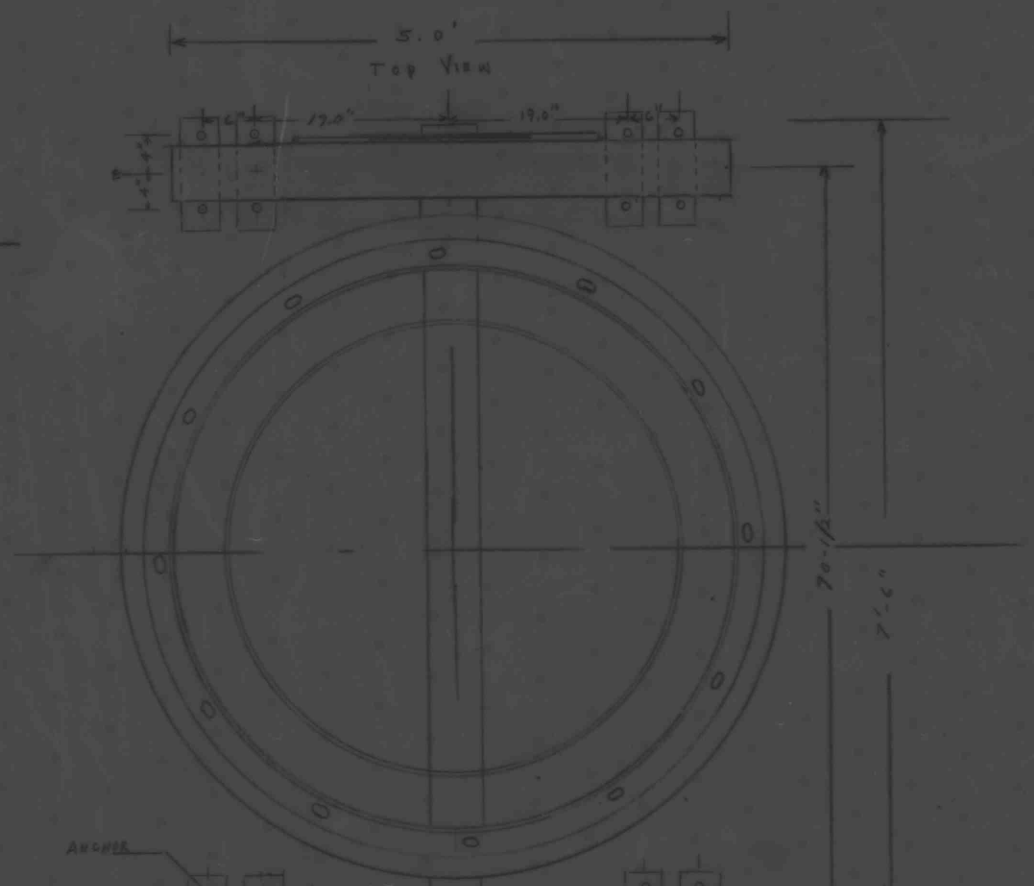

1. ASSEMBLE CHUTE (BOLTS)
2. WELD HALF CIRCLE WASHERS
3. INSTALL AXLE
4. INSTALL CHUTE (FRAME)
5. INSTALL 6" x 5 FOOT "I" BEAMS W/ "U" BOLTS TO ROOF
6. INSTALL ANCHOR PLATES

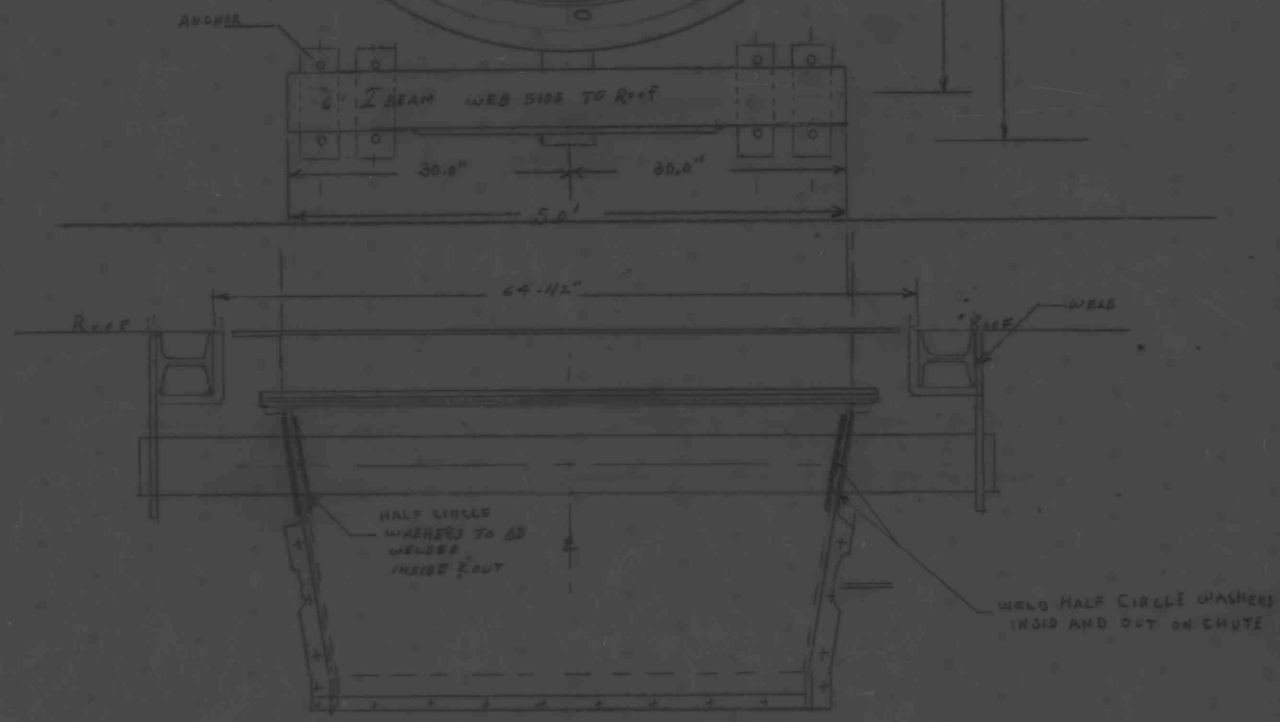

FRONT VIEW

L.W.C.

IMAAS41516 7